


NEW MAYTRX Column Kit

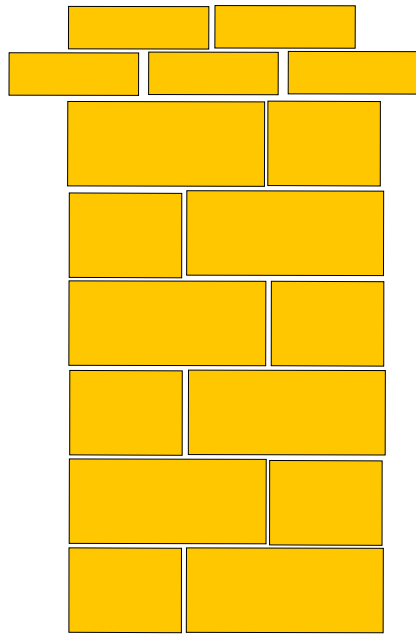

3'
Column

26"x 26" x 3" Column Cap for KIT
made with with Maytrx Cap Stones



The 26"x 26" Cap can be made from 9 Maytrx Cap stones. Each stone will have a finished size of 8.75"x 8.75" by using a combination of splitting or cutting each stone. The stones are made in three different patterns. It is suggested that all stones be glued in final position

Top Cap

An optional finish Top Cap can be made with 4 Maytrx Cap stones. Each stone will have a finished size of 10 " x 10" by using a combination of splitting and cutting each stone.

NOTE:

When expanding the Column Kit beyond the normal dimension of 22"x22" adjust the Cap and Top stone dimensions accordingly.

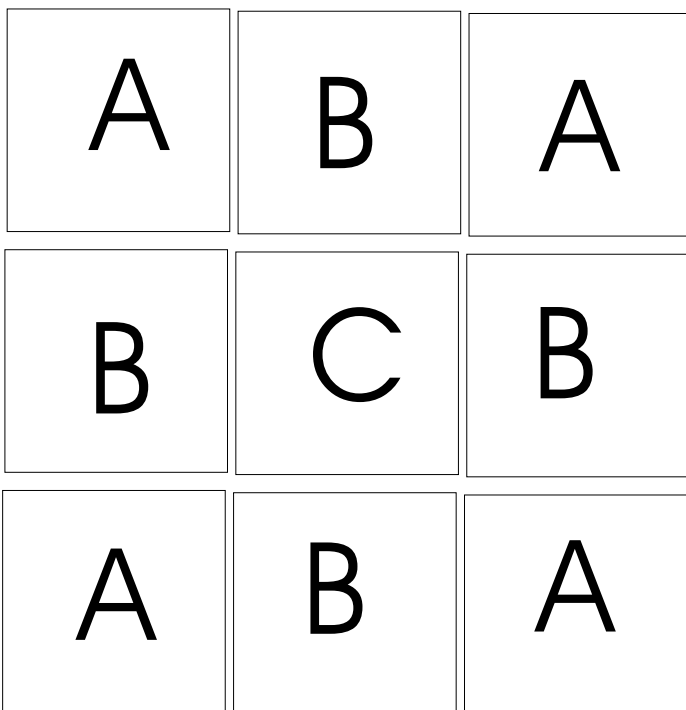


Typical
Maytrx Cap
12x11


A Stone Detail (4 each)




Typical
Maytrx Cap
12x11

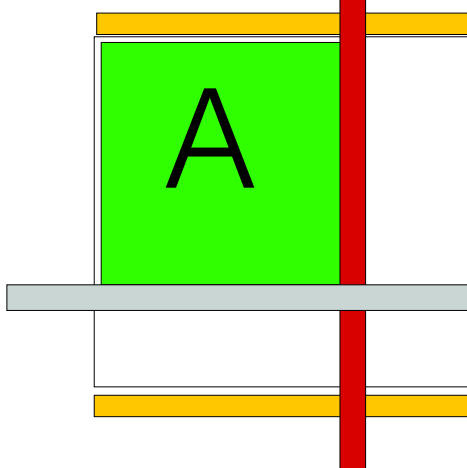


Typical
Maytrx Cap
12x11

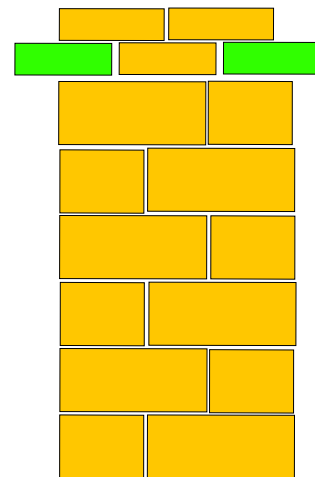


EACH CUT or SPLIT is at 8.75"

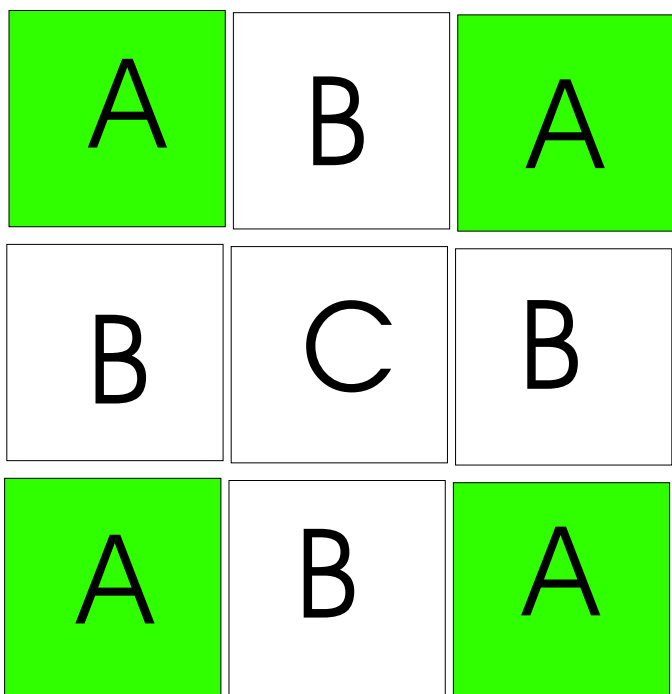

B Stone Detail (4 each)




Typical
Maytrix Cap
12x11

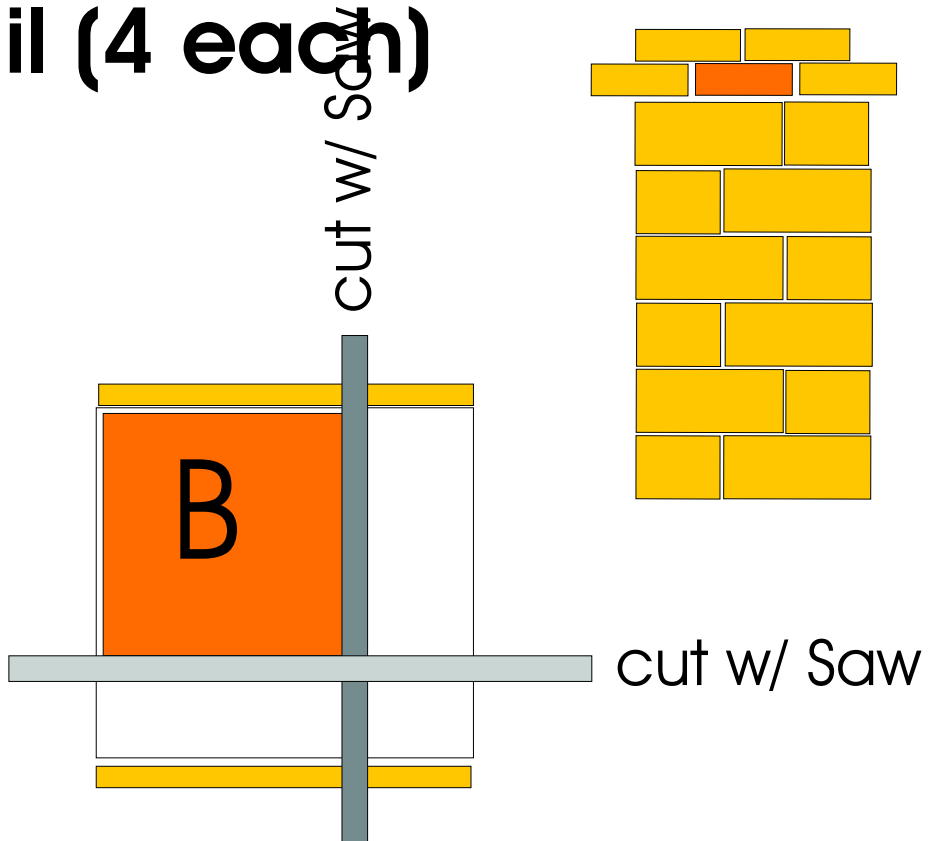

Typical
Maytrix Cap
12x11


EACH CUT or SPLIT is at 8.75"

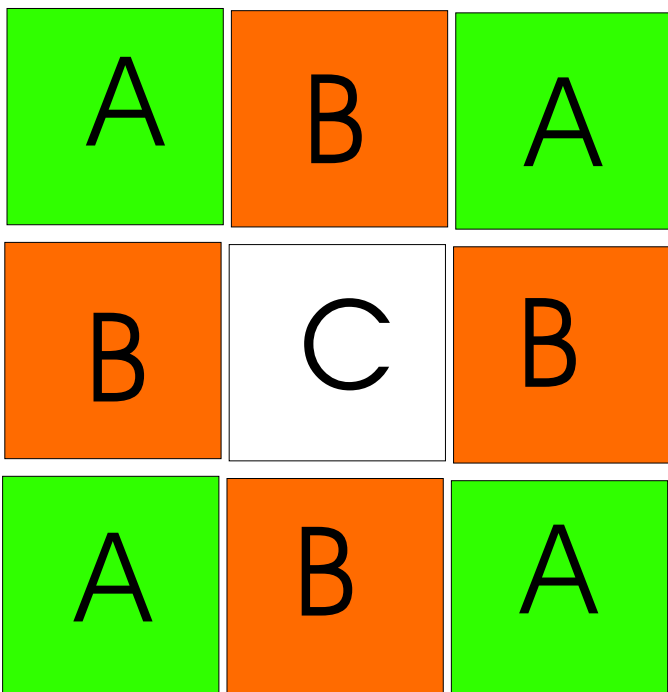

C Stone Detail (1 each)




Typical
Maytrix Cap
12x11

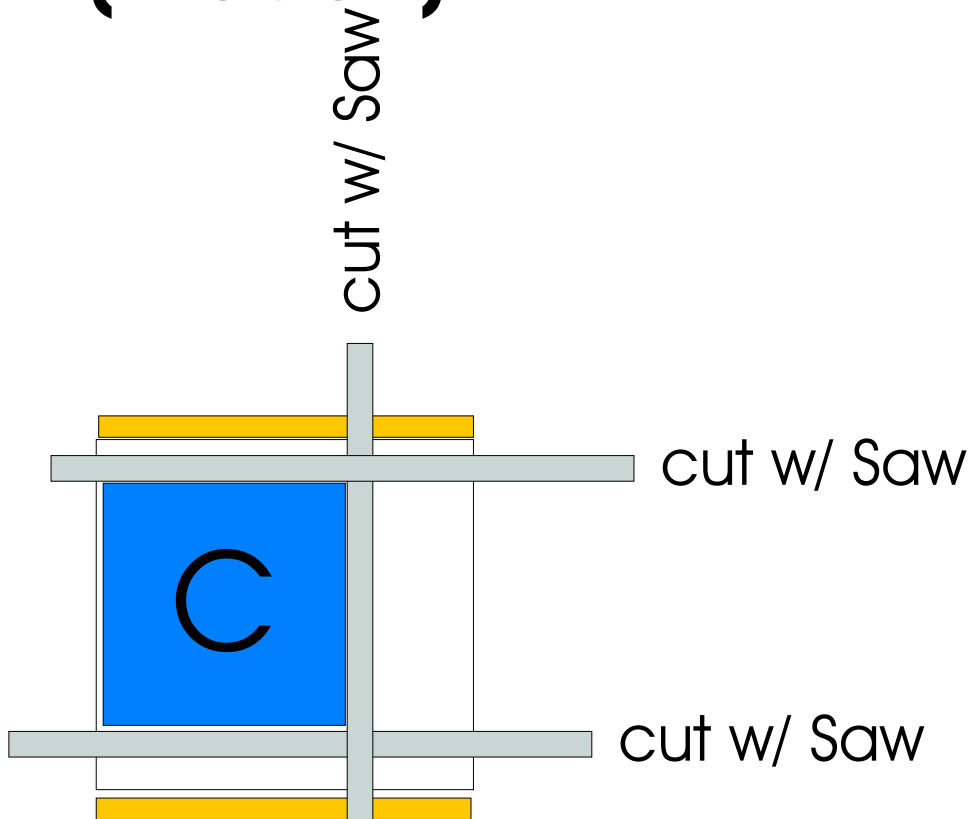

Typical
Maytrix Cap
12x11

EACH CUT or SPLIT is at 8.75"

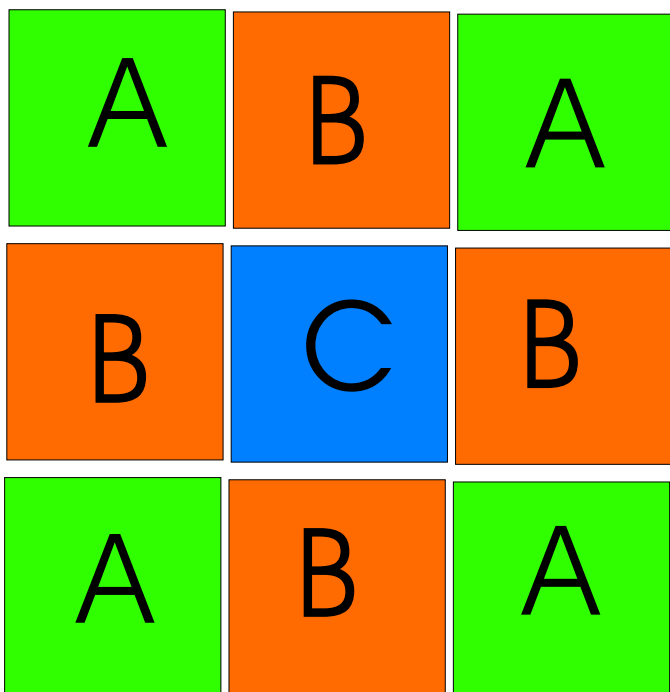


T Stone Detail (4 each)


The Top of a column cap can be made with 4 each, Maytrx Cap Stones. The stone will be cut and split to produce a 10" x 10 " stone. the four T stones will create a 20"x20" finish to the Column Top



Typical
Maytrx Cap
12x11

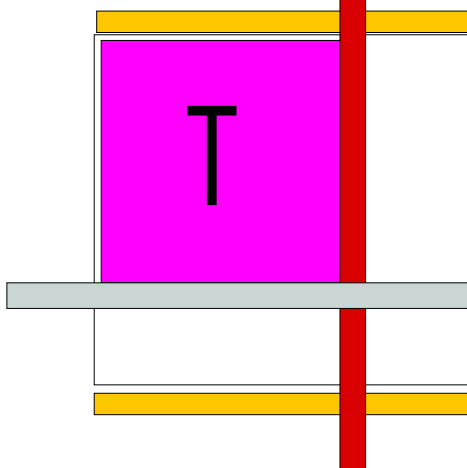

Typical
Maytrx Cap
12x11

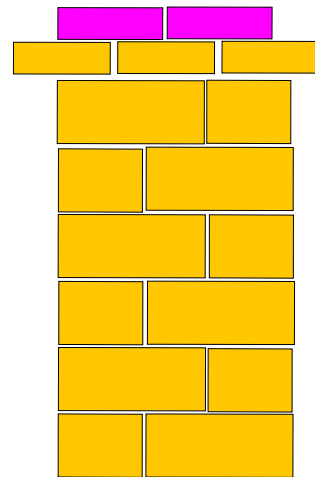

EACH CUT or SPLIT is at 10"

